PHIL - B01093

CONSUMER ELECTRONICS

PHILIPS

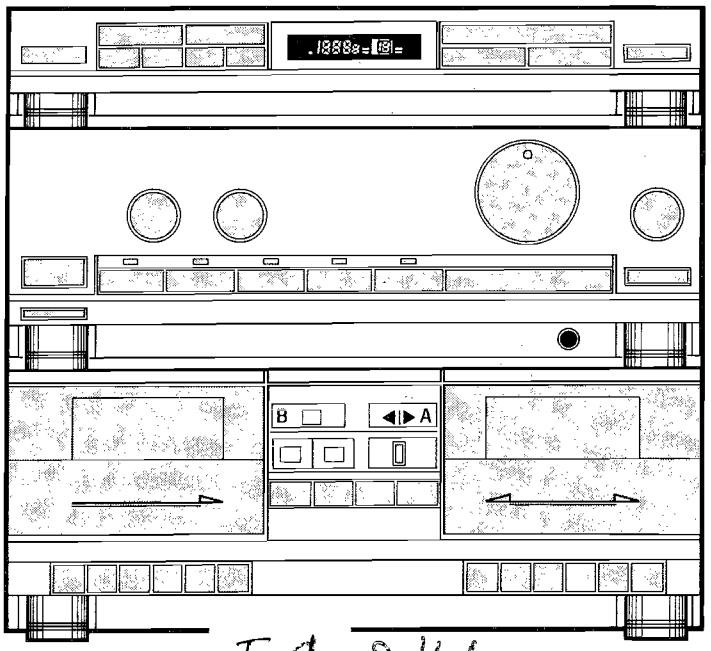

FS 241

FS 240

GB	Receiver/Cassette deck	5
F	Récepteur/Platine-cassette	12
D	Receiver/Cassettendeck	20
NL	Receiver/Cassettedeck	28
E	Receptor/Magnetófono de casete	35
I	Ricevitore/Registratore	42
S	Receiver/Kassettspelare	49
SF	Vastaanotin/Kasettidekki	56

B/693

(GB) English ..... page 5

Illustrations ..... pages 3, 4 and 66
Guarantee and service ..... pages 67 + 68

(F) Français ..... page 12

Illustrations ..... pages 3, 4 et 66
Garantie et service après-vente ..... pages 67 + 68

(D) Deutsch ..... Seite 20

Abbildungen ..... Seiten 3, 4 und 66
Garantieleistung und Service ..... Seiten 67 und 68
Die Deutsche Bundespost informiert ..... Seite 27

(NL) Nederlands ..... pagina 28

Afbeeldingen ..... pagina's 3, 4 en 66
Garantie en service ..... pagina's 67 + 68

(E) Español ..... página 35

Figuras ..... páginas 3, 4 y 66
Garantía y servicio ..... páginas 67 + 68

(E) Este aparato lleva los elementos antiparasitarios necesarios para cumplir con los limites que se estableren en el Anexo V del Reglamento sobre Perturbaciones Radioeléctricas e Interferencias aprobado en el Real Decreto 138/1989 (B.O.E. de 9 de Febrero 1989).

(I) Italiano ..... pagina 42

Illustrazioni ..... pagine 3, 4 e 66
Garanzia e servizio ..... pagine 67 e 68

(S) Svenska ..... sida 49

Figurer ..... sidorna 3, 4 och 66
Garanti och service ..... sidorna 67 och 68

(SF) Suomi ..... sivu 56

Kuvat ..... sivut 3, 4 ja 66
Takuu ja huolto ..... sivut 67 ja 68

(DK) Dansk

Bemærk: Netafbryderen er sekundært indkoblet og afbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lysnettet så længe netstikket sidder i stikkontakten.

(N) Norsk

Typeskilt finnes på apparatens bakside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde netdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

Garanti og service ..... sider 68

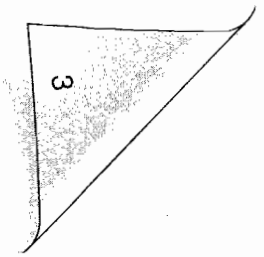

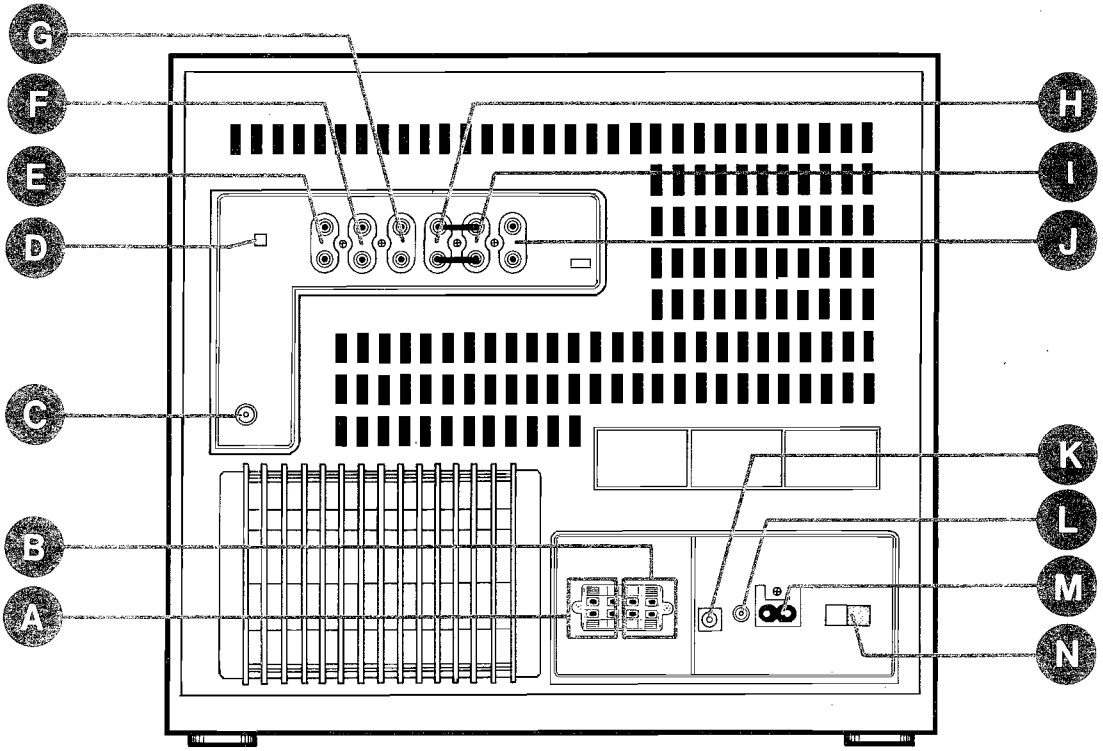
G
F
E
D
C
B
A
H
I
J
K
L
M
N

1

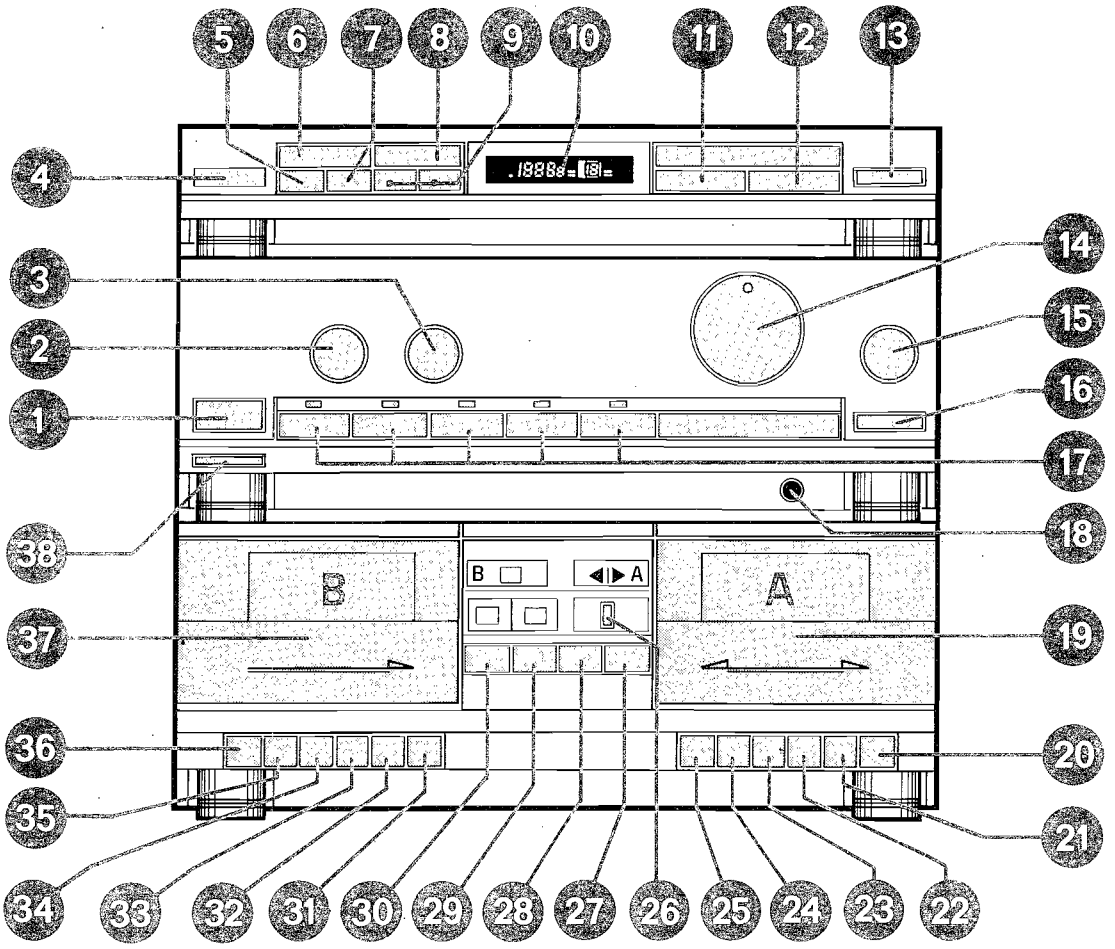
5
6
7
8
9
10
11
12
13
4
3
2
1
38
37
36
35
34
33
32
31
30
29
28
27
26
25
24
23
22
14
15
16
17
18
19
20
21
B
A

2

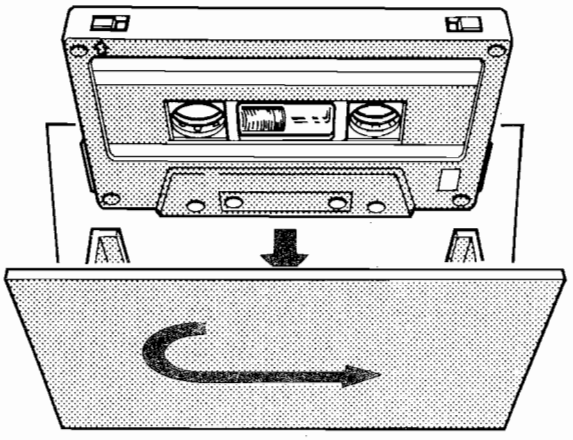

3

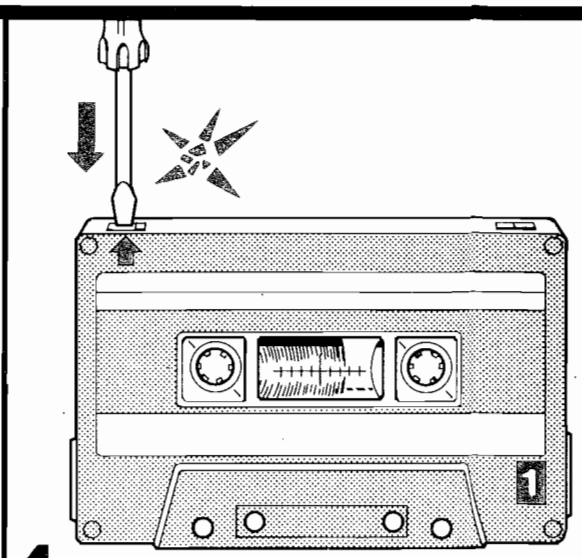

4

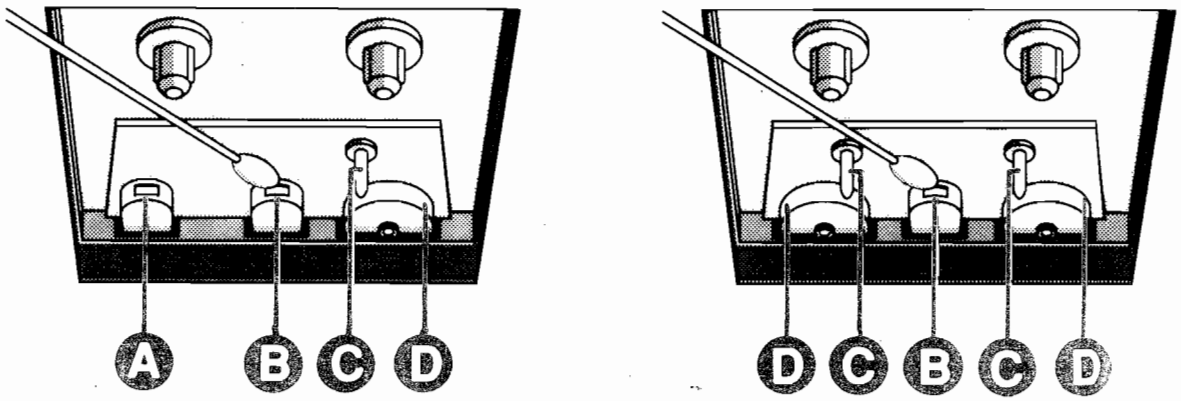

5

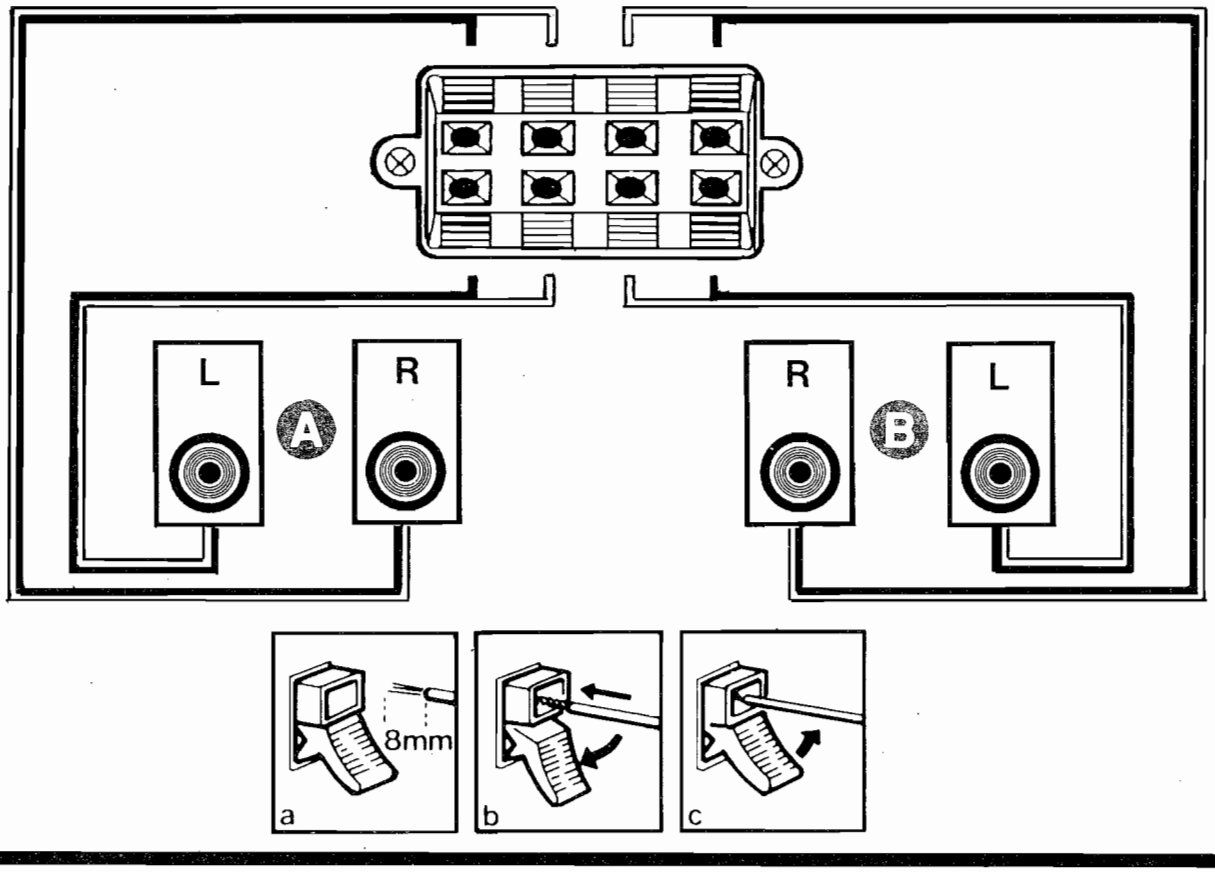

6

CONTROLS

FRONT PANEL - fig. 2, page 3

① **STAND BY button** - press to go to stand by
② **BASS control** - to adjust the bass tones
③ **TREBLE control** - to adjust the high-frequency gain
④ **IR REMOTE** - infrared sensor for remote control
⑤ **MONO button** - for mono reception
⑥ **AUTO PROGRAM button** - for automatic programming of preset stations
⑦ **MEMORY button** - to open and close the memory when storing a preferred station
⑧ **AUTO SCAN button** - for scanning preset stations
⑨ **PRESETS ⌄ button** - press to select the lower preset station numbers
PRESETS ⌃ button - press to select the higher preset station numbers
⑩ **display showing:**
CASS, Cd, PHO or Add - the selected source
LW, MW or FM (some versions SW) - the selected waveband
STEREO - FM stereo reception
MEMO - when the memory has been opened to store a preferred station
The tuned frequency
0 to 19 - the number of the selected preset station
Auto Pro - when the automatic programming function is used
SCAN - when the scanning function is used
(((- flashes when the remote control is used
⑪ **TUNING DOWN ⌄ button** - press to tune towards the lower end of the selected band
⑫ **TUNING UP ⌃ button** - press to tune towards the higher end of the selected band
⑬ **WAVEBAND button** - to select the waveband
⑭ **VOLUME control** - to adjust the volume
note: the LED indicator in the volume control will light up as long as the mains plug is connected to the wall socket. The LED indicator will flash when the remote control is used.
⑮ **BALANCE control** - to adjust the balance between the left and right speakers
⑯ **DYNAMIC BASS BOOST button** - press to increase the bass response
⑰ **source selectors**
TAPE - for the cassette deck
CD/CDV - for equipment connected to Ⓖ
PHONO - for a record player connected to Ⓔ
TUNER - for the radio
TV/VCR - for equipment connected to Ⓕ
⑱ **PHONES socket** - for stereo headphones
⑲ **Cassette holder A** - see fig. 3 for how to insert the cassette.
⑳ **PAUSE ▯▯ button A** - pressing this button stops playback temporarily. Press the PAUSE ▯▯ button again to continue playback.
㉑ **STOP/EJECT □ ⏏ button A** - for stopping the tape transport and for opening cassette holder ⑲.
㉒ **WIND ▷▷ button A** - for fast winding to the right.
㉓ **REWIND ◁◁ button A** - for fast winding to the left.
㉔ **PLAY button A** - for starting playback from deck A. The direction of tape travel is indicated by the DIRECTION indicator.
㉕ **DIRECTION ◁▷ button A** - for reversing the direction of tape travel. You can also press the button *during* playback.
㉖ **REVERSE MODE button** for deck A:
⇄: both sides will be played. The tape stops at the end of the second side.
↻: both sides will be played continuously until the STOP/EJECT □ ⏏ button ㉑ is pressed.
㉗ **REC MUTE button** - for making a silent recording.
㉘ **FE I / CrO_2 II button** - for tape selection.
㉙ **DOLBY NR button** - The Dolby Noise Reduction system is switched on or off with this button.
The Dolby NR (Noise Reduction) system is manufactured under license from Dolby Laboratories Licensing Corporation.
The word 'Dolby' and the symbol ▯▯ are trademarks of Dolby Laboratories Licensing Corporation.
㉚ **HI SPEED DUBB. button** - for selecting the dubbing speed.
㉛ **PAUSE ▯▯ button B** - pressing this button stops recording or playback temporarily. Press the PAUSE ▯▯ button again to continue recording or playback.
㉜ **STOP/EJECT □ ⏏ button B** - for stopping the tape transport and for opening cassette holder ㊲.
㉝ **WIND ▷▷ button B** - for fast winding to the right.
㉞ **REWIND ◁◁ button B** - for fast winding to the left.
㉟ **PLAY ▷ button B** - for starting playback from deck B.
㊱ **RECORD button B** - to set deck B in the record mode.
㊲ **Cassette holder B** - see fig. 3 for how to insert the cassette.
㊳ **SURROUND SOUND button** - press to switch on a second pair of speakers to obtain a surround sound effect.

CONNECTIONS

REAR PANEL - fig. 1, page 3

Ⓐ **SPEAKERS FRONT** - terminals for a pair of speakers, impedance 8 ohms
Ⓑ **SPEAKERS SURROUND REAR** - terminals for a second pair of speakers, impedance 8 ohms, to obtain a surround sound effect
Ⓒ **FM-ANTENNA** - socket for FM-aerial, impedance 75 ohms
Note: Some versions have two screws for the FM antenna, impedance 300 ohms.
Ⓓ **GRID SEL.** - (not on all versions), for selecting the tuning grid, see 'TUNER' chapter
Ⓔ **PHONO MD** - input sockets for a record player having a magneto-dynamic pick-up cartridge
Ⓕ **TV/AUX** - input sockets for external equipment, e.g. a TV set
Ⓖ **CD/CDV** - input sockets for external equipment, e.g. a CDV or CD player
Ⓗ **EQ. IN** - for sound processors, e.g. equalizer, expander
Ⓘ **EQ. OUT** - for sound processors, e.g. equalizer, expander
Ⓙ **LINE OUT** - for external equipment, e.g. an amplifier
Ⓚ **PHONO SUPPLY** - for connecting a record player without its own power supply section. Check that the voltage of socket Ⓚ matches that of the record player.
Ⓛ **REMOTE** - RC-5 remote control input/output socket, for connecting e.g. a CD player to the system.
Ⓜ **MAINS** - socket for mains lead
Ⓝ **Voltage selector** - (not on all versions)
Check that the voltage setting of the unit corresponds to your local mains supply.

The type plate is located on the back of the set

This product complies with the radio interference requirements of the European Community.

INSTALLATION

STANDARD CONNECTIONS - fig. 1-2, page 3

Note: To avoid disturbing noise, switch off the receiver or set the VOLUME control ⑭ to ∞ (fully anti-clockwise) before making any connections.

Aerials

- The FM-ANTENNA socket Ⓒ is used for connection to a Cable Antenna System or to a roof-mounted FM aerial with an impedance of 75 ohms. If none of these are available, connect the supplied wire aerial to the centre pin of the socket.

Note: Some versions have two screws for the FM antenna, impedance 300 ohms.

Speakers

- Connect a pair of 8 ohms speakers to the SPEAKERS FRONT terminals Ⓐ (L = left; R = right), see Fig. 6.
- To obtain a surround sound effect, you may connect a second pair of 8 ohms speakers to the SPEAKERS SURROUND REAR terminals Ⓑ.
- The wires of the loudspeaker cables should be stripped of their insulation (approx. 8 mm). Remove the loudspeaker plugs, or use suitable adaptor cables.

One of the two wires of a loudspeaker cable is marked, e.g. with a colour or rib. Connect the marked wire to the red terminal, the non-marked wire to the black terminal.

Stereo headphones

- You may connect a pair of stereo headphones with 6.3 mm plug to the PHONES socket ⑱. Inserting the plug will disconnect the speakers.

MAINS SUPPLY - fig. 1

- Check that the voltage setting of the unit corresponds to your local mains supply.
- Connect the mains lead to the MAINS socket Ⓜ and insert the plug of the mains lead into the wall socket. The mains supply is now switched on.
- **To disconnect the set from the mains completely, withdraw the mains plug from the wall socket.**

Important note for users in the U.K.:
When fitting a mains plug to the mains lead, proceed as follows:
The wires in the mains lead are coloured in accordance with the following code:
BLUE = NEUTRAL,
BROWN = LIVE.
These colours may not correspond with the colour markings identifying the terminals in your plug, so proceed as follows:
Connect the Brown wire to the terminal marked L or coloured Red.
Connect the Blue wire to the terminal marked N or coloured Black.
No connection is necessary to the earth terminal.
Note: This equipment must be protected by a 3 amp Fuse if a 13 amp plug is used or, if any other type of plug is used, by a 5 amp Fuse either in the plug or adapter or at the distribution board. If in doubt, consult a qualified electrician.

INSTALLATION

AUXILIARY CONNECTIONS - fig. 1, page 3

Record player PHONO MD
- A record player with a magneto-dynamic pick-up cartridge can be connected to the PHONO MD sockets Ⓔ.

CD and CD-Video players CD/CDV
- Connect a CD or CDV player to the CD/CDV sockets Ⓖ.

Television set TV/AUX
- Connect a TV set, video recorder or cassette deck, etc. to the TV/AUX sockets Ⓕ.

Remote control REMOTE
- Connect the output socket REMOTE Ⓛ to the input socket of the external equipment that uses the RC-5 remote control system. In this way you can operate external sets by remote control through the sensor of the receiver.

External equipment LINE OUT
You can connect an amplifier or extra sound recording equipment, e.g. a cassette or tape deck or a video recorder.
- Connect the LINE OUT sockets Ⓙ to the input sockets of the external equipment.

Sound processors EQ.
If you wish you can connect a sound processor, e.g. graphic equalizer or expander.
- ***Remove the bridge connectors*** from the EQ. sockets Ⓗ and Ⓘ.
- Connect the EQ. input sockets to the output sockets of the sound processor.
- Connect the EQ. output sockets to the input sockets of the sound processor.

If the EQ. sockets are not used, ***always insert the bridge connectors.***

SWITCHING ON AND OFF

- Press one of the source selectors ⑰ to switch on.
- Switch off the unit by pressing the STAND BY button ①.

AMPLIFIER

SOUND CONTROL

- Adjust the sound volume with the VOLUME control ⑭.
- Adjust the stereo balance between the left and the right channels with the BALANCE control ⑮.
- Adjust the bass tones with the BASS control ② and the high-frequency gain with the TREBLE control ③.
- Press the DYNAMIC BASS BOOST button ⑯ if you want to increase the bass response.
- If you have connected a second pair of speakers, you can press the SURROUND SOUND button ㊳ to obtain a surround sound effect.

SOURCE SELECTION

Radio: Press the source selector TUNER ⑰ to select radio reception.
Cassette deck: Press the source selector TAPE ⑰ to select the cassette deck.
CD player: Press the source selector CD/CDV ⑰ to select a CD player.
Record player: Press the source selector PHONO ⑰ to select a record player.
Other equipment:
– Press the source selector TV/VCR ⑰ to select external equipment connected to the TV/AUX sockets Ⓕ e.g. a TV set.

Remote controlled source selection
First press the desired source selector button TUNER, CD, TAPE, TV, CDV or VCR, to set the remote control unit in the relevant mode.
The remote control unit will remain in that mode, ***until another*** source selector button is pressed.

RADIO RECEPTION

GENERAL

- Some versions of this unit are fitted with a tuning grid selector ⓓ at the rear, which selects (with the mains switched off) the size of the frequency step between adjacent channels in the MW band. In North and South America it should be set to 10 kHz, in all other parts of the world to 9 kHz. If your unit has no such selector, then it has been preset in the factory for correct operation in your area.

- Press TUNER ⑰.
- Select the waveband by pressing selector ⑬ until the desired waveband appears in the display.
- Tune to a radio station or select a preset number. (See the following chapters).
- When the word STEREO appears in the display ⑩, you are receiving an FM-stereo transmitter. A disturbing noise, due to a weak FM-stereo signal, can be suppressed by pressing the MONO button ⑤.

TUNING

- Press the TUNING DOWN button ⌄ ⑪ or TUNING UP ⌃ ⑫ for more than 0.5 seconds. Then release this button. The tuner will now search until a transmitter of sufficient strength has been found. The display shows the tuned frequency.
- If the transmitter found is not the desired one, simply repeat this operation.
- Weak transmitters are skipped during automatic tuning. They can be tuned to as follows:
- Keep the TUNING DOWN button ⌄ ⑪ or TUNING UP ⌃ ⑫ pressed until you approach the required frequency.
- If you now briefly press TUNING DOWN button ⌄ ⑪ or TUNING UP ⌃ ⑫ the frequency is changed by one step each time until finally the right frequency has been reached, or until optimum reception is obtained.

Note: When tuning to a frequency that has been stored as a preset station in the memory, the number on which it has been stored appears in the display next to the frequency.

PRESET STATIONS

You can store 20 preferred stations in the memory of the tuner. This enables you to find your favourite stations quickly and easily.
The preset stations are selected with the PRESETS ⌄ and PRESETS ⌃ buttons ⑨.

Automatic programming of preset stations

- Press AUTO PROGRAM button ⑥. Twenty stations in the FM waveband will now be stored automatically in the memory. If less than twenty stations of sufficient strength are found, the unit will then scan the MW band (and if necessary the LW and SW bands) to store preset stations in the rest of the memory locations.

Manual programming of preset stations

- Press MEMORY button ⑦. The word MEMO appears in the display.
- Tune to the station which you wish to store, as described under TUNING.
- Select a memory position number (0 - 19) with the PRESETS ⌄ or PRESETS ⌃ buttons, or the numeric buttons of the remote control unit.
- Press MEMORY button ⑦. The word MEMO disappears from the display. The station is now entered in the memory.

Note: A preset station can be erased from the memory by programming a new one in its place.

Tuning to preset stations

- Select the desired preset station number (0 - 19) by either pressing the PRESETS ⌄ / PRESETS ⌃ button briefly, or holding the button pressed.
- If using remote controlled operation, first select TUNER on the remote control unit and use the numeric buttons to select the desired preset station.
- You will now receive the selected station and the display will show the tuned frequency and the preset number.

Scanning preset stations

- Press AUTO SCAN button ⑧. The display shows SCAN and the unit will now scan all preset stations. You will hear 5 seconds of the programme of each station.
- Press AUTO SCAN button ⑧ again to stop the scanning function.

CASSETTE DECKS

GENERAL

Copyright
Recording or copying is only authorised if there is no violation of copyright or other rights of third parties.

Note for users in the U.K.
Recording and playback of material may require consent. See Copyright Act 1956 and The Performers' Protection Acts 1958 to 1972.

RECORDING (DECK B)

- Open the cassette holder ㊲ by pressing the STOP/EJECT □ ⏏ button ㉜.
- Insert a cassette, which is *not* protected against recording, in the cassette holder ㊲ with the open side facing downwards and the full reel on the left (see fig. 3). Close the cassette holder.
- Set tape selection button ㉘ ▬ FE I / ▬ CrO_2 II according to the type of tape which is used.
- If desired, switch on the DOLBY NR system with button ㉙.
- The HI SPEED DUBB. button ㉚ must not be pressed.
- Select the sound source from which you wish to record.
- Press PAUSE ▯▯ button ㉛.
- Press the RECORD button ㊱. The PLAY ▷ button ㉟ will also be depressed automatically.
- By releasing the PAUSE ▯▯ button ㉛ at the correct moment you can start the recording.
- Consult your dealer, if a whistling sound is heard during the recording of a MW or LW transmitter.
- For short pauses press the PAUSE ▯▯ button ㉛. Press the PAUSE ▯▯ button ㉛ again to resume recording.
- The deck stops automatically at the end of the cassette. Press the STOP/EJECT □ ⏏ button ㉜ to stop recording at an earlier point.

REC MUTE

- By holding the REC MUTE button ㉗ pressed during recording, a silent passage is obtained. Undesired announcements, etc. can thus be omitted during recording or dubbing.

The LED indicator REC/REC MUTE goes out as long as the REC MUTE button ㉗ is pressed.

DUBBING (FROM DECK A TO B)

- Open the cassette holders ㊲ (deck B) and ⑲ (deck A) by pressing the STOP/EJECT □ ⏏ buttons ㉜ and ㉑.
- Insert the *recorded* cassette in the cassette holder ⑲ of deck A with the open side facing downwards and the full reel on the left; then close the cassette holder.
- Insert a cassette which is *not* protected against recording in the cassette holder ㊲ of deck B with the open side facing downwards and the full reel on the left. Close the cassette holder.
- Set tape selection button ㉘ ▬ FE I / ▬ CrO_2 II according to the type of tape which is used.

Note: The best results are obtained if two tapes of the same type are used. If using two different types, use selection button ㉘ to select the tape type appropriate for the recording deck B.

- Select the dubbing speed with HI SPEED DUBB. button ㉚:

– released for normal speed dubbing.
– pressed for high speed dubbing.

- Select the tape direction ▷ for deck A with DIRECTION ◁▷ button ㉕.
- Press both PAUSE ▯▯ buttons.
- Press the buttons PLAY ㉔ on deck A and RECORD ㊱ on deck B.
- Start dubbing by pressing both PAUSE ▯▯ buttons ⑳ and ㉛ at the same time.

The HIGH SP. DUBB. indicator will then light up.

Notes:

- Do not press the HI SPEED DUBB. button ㉚ ***during*** dubbing.
- During dubbing any sound source can be listened to by pressing the relevant source selector button ⑰.
- By pressing the TAPE button ⑰, the dubbing process can be listened to (also when dubbing at high speed).
- The button ㉙ of the Dolby Noise Reduction system has no influence when dubbing. An original cassette recorded with Dolby NR will always produce a copy with Dolby NR.

PLAYBACK

Playback of both sides of a cassette (deck A)

- Open the cassette holder ⑲ of deck A by pressing the STOP/EJECT □ ⏏ button ㉑.
- Insert a recorded cassette in the cassette holder with the open side facing downwards and the full reel on the left (see fig. 3). Then close the cassette holder.
- Select ⇄ with the REVERSE MODE button ㉖.
- Select the tape direction ▷ for Deck A with direction ◁▷ button ㉕.
- Set tape selection button ㉘ ▬ FE I / ▬ CrO_2 II according to the type of tape which is used.
- If required, switch on the DOLBY NR system with button ㉙.
- Press TAPE ⑰.
- Now press the PLAY button ㉔. Both sides of the cassette will be played. The tape will stop at the end of the second side.

Playback of one side of a cassette (deck A)

- If you only want to play one side of the cassette (when using deck A), then insert the cassette in the cassette holder with the full reel on the ***right.***
- Proceed further as described previously under 'Playback of both sides of a cassette'.

CONTINUOUS PLAYBACK

Continuous playback of two sides of one cassette (deck A)

- Open cassette holder ⑲ by pressing the STOP/EJECT button ㉑.
- Insert a recorded cassette in cassette holder ⑲.
- Select ⇄ with the REVERSE MODE button ㉖.
- Set tape selection button ㉘ ▬ FE I / ▬ CrO_2 II according to the type of tape which is used.
- If required, switch on the Dolby NR system with button ㉙.
- Press TAPE ⑰.
- Now press the PLAY button ㉔. Both sides of the cassette will be played continuously until the STOP/EJECT □ ⏏ button ㉑ is pressed.

Continuous playback with two cassettes (decks A and B)

- Open the cassette holders ㊲ and ⑲ by pressing the STOP/EJECT buttons ㉜ and ㉑.
- Insert a *recorded* cassette in both cassette holders with the open side facing downwards and the full reel on the left. Close the cassette holders.
- Select ⇄ with the REVERSE MODE button ㉖.
- Select the tape direction ▷ for Deck A with direction ◁▷ button ㉕.
- Set tape selection button ㉘ ▬ FE I / ▬ CrO_2 II according to the type of tape which is used.
- If required, switch on the Dolby NR system with button ㉙.
- Press TAPE ⑰.
- Now press the PLAY ▷ button ㉟ and then PLAY button ㉔. Deck A starts to play *both sides* of the cassette. Deck A stops at the end of the second side and then deck B starts to play.

Fast winding

- By pressing the WIND ▷▷ button ㉒ / ㉝ or REWIND ◁◁ button ㉓ / ㉞, fast winding is possible in both directions.
- To stop fast winding, press STOP/EJECT □ ⏏ button ㉑ / ㉜.

Automatic stop

The cassette deck stops automatically at the end of the cassette. The automatic stop works on the recording and playback functions.

Compact Cassettes

- The tape in the cassette is attached at both ends with leader tape. Nothing will be recorded for 6 to 7 seconds at the beginning (or at the end) of the tape.
- Accidental erasure of a recording can be prevented by breaking the small tab in the top left-hand corner on the back of the cassette. You can then no longer record on this side. This protection can be removed by covering the hole with a small piece of adhesive tape.
- Store your cassettes in the box provided. Keep the cassettes at room temperature and avoid leaving them in the sun or too close to magnets and transformers of e.g. recorders, radios, TVs and loudspeakers.

DOLBY NOISE REDUCTION

The Dolby Noise Reduction system is manufactured under license from Dolby Laboratories Licensing Corporation. The word 'Dolby' and the DD symbol are trademarks of Dolby Laboratories Licensing Corporation.

- The system is switched on and off with DOLBY NR button ㉙.

A cassette recorded with the Dolby Noise Reduction system must also be played back in the Dolby NR mode.
If you forget to operate the DOLBY NR button, the treble may be reproduced too strongly or too faintly.
Note: DOLBY NR button ㉙ has no influence during dubbing. An original cassette recorded with Dolby NR automatically produces a copy with Dolby NR.

RECORDER MAINTENANCE

- After approximately 15 hours of use the heads Ⓐ and Ⓑ, the capstans Ⓒ and the pressure rollers Ⓓ (see fig. 5) must be cleaned because otherwise both recording (only deck B) and playback may deteriorate in quality. You can clean these:

– by playing an SBC 114 cleaning cassette,
– with a cotton bud dipped in alcohol. Make sure that the unit is not connected to the mains.
The drive mechanism must NOT be lubricated!

GENERAL INFORMATION

- Do not leave the unit or cassettes for any length of time in direct sunlight or other places where high temperatures can occur, such as in the vicinity of heating apparatus.
- Do not expose the equipment to humidity or rain.
- Every amplifier produces heat when in use, this must be able to dissipate freely. For this reason do not cover any vents and make sure that there is sufficient ventilation room around the unit.

REMOTE CONTROL

- This remote control enables you to operate any equipment that uses the RC-5 remote control system.
- Connect the equipment, e.g. a CD player, to the REMOTE socket Ⓛ.
- Point the remote control handset towards the IR REMOTE sensor ④, press the desired source button and then press the required button.

BATTERIES

- Open the battery compartment and insert two batteries as indicated, type R6, UM3 or AA-cells.
- Remove the batteries when they have run down or if they will not be used again for a long period.

SOURCE SELECTION

Select and switch on the apparatus you want to operate by remote control by pressing:
TUNER - for a receiver
CD - for a CD player
TAPE - for a cassette deck
TV - for a television set (+ teletext)
CDV - for a CDV player
VCR - for a video recorder

Switch off the selected apparatus by pressing:
ST.BY - to go to stand by.

FUNCTIONS

Receiver - TUNER

- **VOL.** - to adjust the volume
- **0-9** - digit buttons for preset stations
- **PRESET** - next ▲ or previous ▼ preset station
- **-/--** - single or two-digit number entry
- **MODE** - to select mono or FM stereo reception
- **MEMO** - to store preset stations in the memory
- **A-SCAN** - automatic scanning of preset stations
- **◄◄** - frequency search down
- **►►** - frequency search up

CD player - CD

- **VOL.** - to adjust the volume
- **0-9** - digit buttons for track selection (also with 2 digits)
- **MEMO** - to store tracks in the memory
- **RANDOM** - for playback in random order
- **PRESET** - next ▲ or previous ▼ track
- **DISC** - next ▲ or previous ▼ disc (changer only)
- **STOP** - to stop playback
- **PAUSE** - to interrupt playback
- **PLAY** - to start playback
- **◄►** - to open/close the CD compartment
- **◄◄** - search backwards
- **►►** - search forwards

FUNCTIONS

Cassette deck - TAPE

- **VOL.** - to adjust the volume

Television - TV

- **VOL.** - to adjust the volume
- **0-9** - digit buttons for the channel numbers
- ⊡ - on-screen display
- **-/--** - single or two-digit number entry
- **MODE** - language/sound channel selection
- **P.P.** - personal preference
- **TXT** - to call up Teletext or FLOF (for FLOF use the coloured buttons PRESET and DISC)
  - ⓘ index page
  - ⇳ hold page
  - ⇨ store in memory
  - ⇦ calling up pages from memory
  - ◕ subcode
  - ⧄ mixing teletext with image
  - **?** concealed information

CDV player - CDV

- **VOL.** - to adjust the volume
- **MEMO** - to store in the memory
- **CLEAR** - to clear the memory
- **MODE** - to repeat
- **PRESET** - for next ▲ or previous ▼
- **DISC** - disc up ▲ or disc down ▼
- **STOP** - to stop playback
- **PAUSE** - to interrupt playback
- **PLAY** - to start playback
- **◄►** - to open/close
- **◄◄** - to scan backwards
- **►►** - to scan forwards

Video recorder - VCR

- **VOL.** - to adjust the volume
- ⊡ - on-screen display
- **-/--** - single or two-digit number entry
- **P.P.** - personal preference
- **STOP** - to stop playback
- **PAUSE** - to interrupt playback
- **PLAY** - to start playback
- **◄◄** - to rewind the video tape
- **►►** - to wind the video tape
- **REC** - to start recording

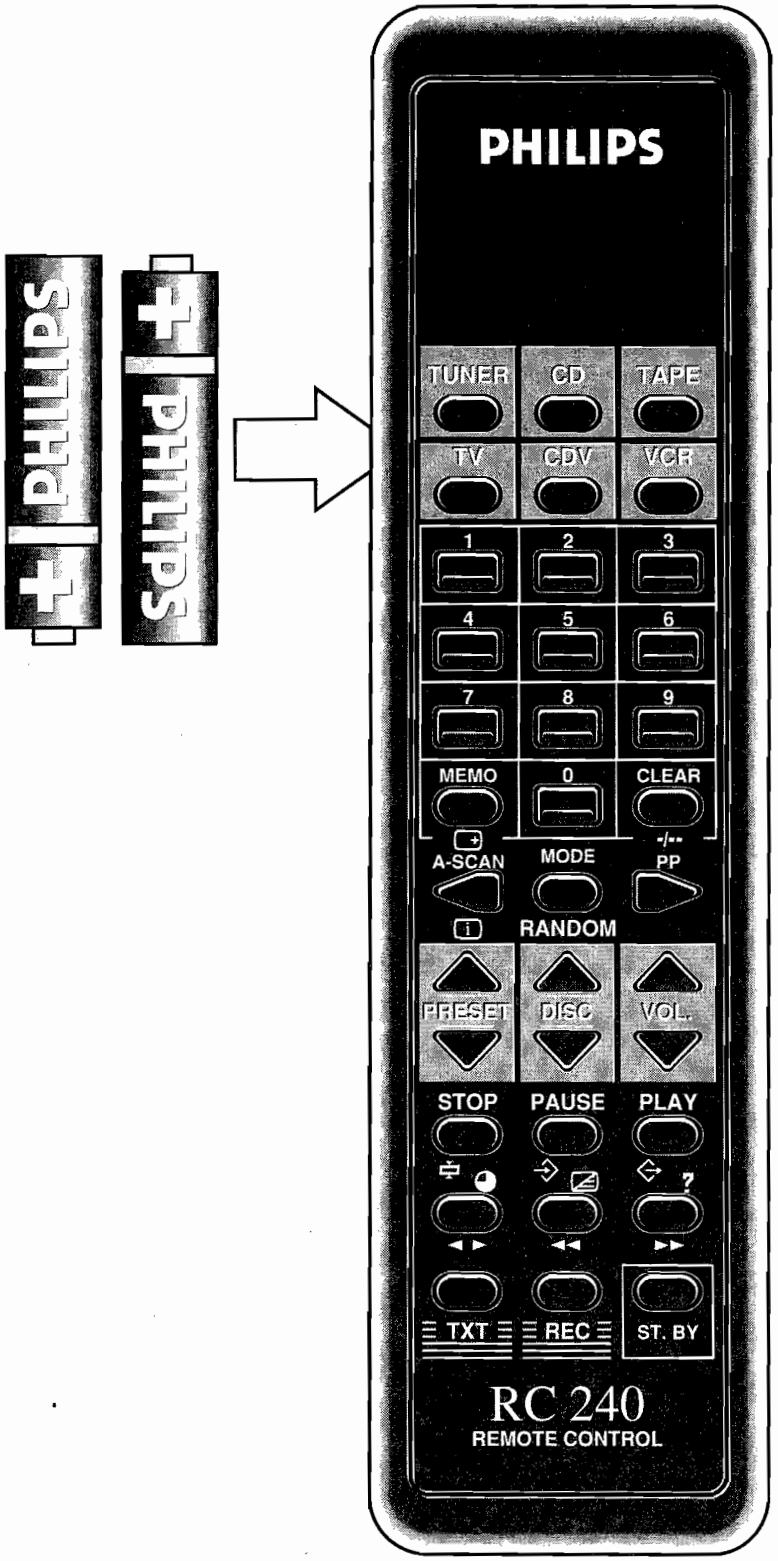
PHILIPS
PHILIPS
PHILIPS
TUNER
CD
TAPE
TV
CDV
VCR
1
2
3
4
5
6
7
8
9
MEMO
0
CLEAR
A-SCAN
MODE
PP
RANDOM
PRESET
DISC
VOL.
STOP
PAUSE
PLAY
TXT
REC
ST. BY
RC 240
REMOTE CONTROL

7

GUARANTEE AND SERVICE FOR UNITED KINGDOM

Philips sell this product subject to the understanding that if any defect in manufacture or material shall appear in it within 12 months from the date of consumer sale, the dealer from whom the product was purchased will arrange for such defect to be rectified without charge, provided:

1. Reasonable evidence is supplied that the product was purchased within 12 months prior to the date of claim.
2. The defect is not due to use of the product for other than domestic purposes, or on an incorrect voltage, or contrary to the Company's operating instructions, or to accidental damage (whether in transit or otherwise), misuse, neglect or inexpert repair.

Products sent for service should be adequately packed as no liability can be accepted for damage or loss in transit, and name and address must be enclosed.

Facts about free service

When service is required, apply to the dealer from whom the product was purchased. Should any difficulty be experienced in obtaining Service, e.g. in the event of the dealer having ceased to trade, you are advised to contact Philips Service.

These statements do not affect the statutory rights of a consumer.

If you have any questions which your dealer cannot answer, please write to ***Philips Consumer Relations, ✉ P.O. Box 298, 420 London Road, CROYDON CR9 3QR,*** or ***☎ (01) 689-2166 Consumer Advice.***

Please retain this card. Produce if service is required.

GUARANTEE AND SERVICE VALID FOR IRELAND

This apparatus is made of high quality material and great care has been taken in its manufacture.

Philips, therefore, give you a guarantee on parts against failures arising from faulty workmanship or material for 12 months after date of purchase. This guarantee is valid on the condition that this certificate is completed and signed immediately on delivery of the apparatus. In case of failure ask your dealer for further information.

If you have any questions which your dealer cannot answer, you may apply to ***Philips Electrical (Ireland) Ltd., Service Department, Newstead, Clonskeagh, DUBLIN 14 - ☎ 69 33 55***

GUARANTEE AND SERVICE VALID FOR AUSTRALIA

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product.

The Philips product carries the following warranties:

C-series HiFi-systems: 12 months. Compact Disc Players: 12 months. Home Audio Systems: 6 months. Clock radios, portable radios, cassette recorders, cassette players and radio recorders: 90 days.

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased.

Note: Please retain your purchase docket to assist prompt service.

Conditions of this warranty

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.
2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

Philips Consumer Products Division, Technology Park, Figtree Drive, Australia Centre, HOMEBUSH 2140, New South Wales

GUARANTEE AND SERVICE FOR NEW ZEALAND

Thank-you for purchasing this quality Philips product. The document you are now reading is your guarantee card.

Guarantee.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions.

1. The product must have been purchased in New Zealand, and this guarantee card completed at time of purchase (this is your proof of the date of purchase).
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket or completed guarantee card) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim.

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact: ***The Guarantee Controller, Philips New Zealand Ltd, ✉ P.O. Box 1041, AUCKLAND - ☎ (09) 605-914***

GARANTIE FÜR DIE BUNDESREPUBLIK DEUTSCHLAND UND WEST-BERLIN

Philips-Geräte sind Markenartikel, die mit größter Präzision nach modernsten Fertigungsmethoden und mit einem Höchstmaß an Sorgfalt hergestellt werden. Das Gerät wird Ihnen gute Dienste leisten, vorausgesetzt daß Sie es sachgemäß bedienen und unterhalten.

Trotz aller Sorgfalt ist das Auftreten von Fehlern nicht auszuschließen. Ihr Partner für die Behebung derartiger Fehler ist Ihr Fachhändler, bei dem das Gerät erworben wurde. Falls ein Reklamationsfall eintritt, wenden Sie sich bitte unter Vorlage des Einkaufsbeleges und des Gerätepasses an Ihren Fachhändler.

GARANTIE ET SERVICE APRÈS-VENTE EN FRANCE

Cef appareil a été fabriqué avec le souci de vous donner entière satisfaction. **PHILIPS** fournira gratuitement au vendeur les pièces détachées nécessaires à sa réparation pendant les périodes suivantes, chacune prenant effet à compter de la date de vente:

- 6 mois pour les magnétophones à cassettes portatifs, les récepteurs radio portatifs, les radiocassettes, les radio-réveils et les électrophones;
- 12 mois pour les radiocassettes équipés de la fonction Compact Disc et les baladeurs Compact Disc;
- 12 mois pour les appareils entrant dans la composition d'une chaîne électro-acoustique, y compris les chaînes compactes stationnaires équipés d'au moins deux sources sonores;

sauf si la détérioration résulte d'une cause étrangère à l'appareil ou du non respect des prescriptions d'utilisation.

Vous bénéficierez en tout état de cause des dispositions des art. 1641 et suivants du Code Civil relatifs à la garantie légale.

Pour tout conseil ou intervention, adressez-vous à votre vendeur.

Pour tout renseignement complémentaire, vous pouvez vous adresser à la succursale Philips la plus proche.

Soucieux d'améliorer continuellement la qualité de nos produits, nous nous réservons le droit d'en modifier à tout moment les caractéristiques.

PHILIPS Électronique Domestique - Société en nom collectif
RCS NANTERRE B 333 760 833
64, Rue Carnot - ✉ B.P. 306 - 92 156 SURESNES Cédex
Informations Consommateurs: ☎ (16-1) 64 80 54 54

GARANTIE EN BELGIQUE ET LUXEMBOURG

Pour les conditions de garantie en Belgique et Luxembourg veuillez vous référer à la carte de garantie que le revendeur doit vous remettre au moment de l'achat.

- ***Pour la Belgique***

Si après l'achat de l'un ou l'autre appareil Philips vous avez des problèmes concernant par exemple la garantie, le fonctionnement ou l'utilisation de ces appareils et que le distributeur qui vous a vendu ces appareils éprouve des difficultés pour les résoudre, prenez contact, soit par téléphone, soit par écrit avec notre service ***'Contact Clientèle', Place de Brouckère 2, 1000 - BRUXELLES, ☎ 02/211 91 11***

GARANTIE EN SERVICE IN BELGIË EN LUXEMBURG

In België en Luxemburg gelden uitsluitend de garantiebepalingen zoals die in het via uw handelaar apart verstrekte garantiebewijs staan aangegeven.

- ***Voor België***

Indien u na de aankoop van een of ander Philips apparaat problemen heeft met bijv. de waarborg, de werking, of het gebruik ervan, en indien de verdeler die u deze apparaten verkocht heeft moeilijkheden ondervindt om deze problemen op te lossen, stelt u zich dan telefonisch of schriftelijk in verbinding met onze dienst ***'Klanten Kontakt', de Brouckèreplein 2, 1000 - BRUSSEL, ☎ 02/211 91 11***

GARANTIE EN SERVICE IN NEDERLAND

- ***Wat wordt gegarandeerd?***

Philips Nederland B.V. garandeert dat dit apparaat kosteloos wordt hersteld indien - bij normaal particulier gebruik volgens de gebruiksaanwijzing - binnen 12 maanden na aankoopdatum fabricage- en/of materiaalfouten optreden.

- ***Wie voert de garantie uit?***

De zorg voor de uitvoering van de garantie berust bij de handelaar die u het apparaat verkocht heeft. De handelaar kan daarbij eventueel een beroep doen op een der Philips Service vestigingen.

- ***Uw aankoopbon + de identificatiekaart***

De identificatiekaart is uw garantiebewijs. U kunt alleen een beroep doen op de bovenomschreven garantie tegen overlegging van de aankoopbon (factuur, kassabon of kwitantie), in combinatie met de identificatiekaart, waarop typenummer en serienummer zijn vermeld. Uit de aankoopbon dienen duidelijk de aankoopdatum en de naam van de handelaar te blijken. Mocht het noodzakelijk zijn deze documenten aan uw handelaar af te geven, dan kunt u hem daarvoor een ontvangstbewijs vragen.

De garantie vervalt indien op de genoemde documenten iets is veranderd, doorgehaald, verwijderd of onleesbaar gemaakt. De garantie vervalt eveneens indien het typenummer en/of serienummer op het apparaat is veranderd, doorgehaald, verwijderd of onleesbaar gemaakt.

- ***Hoe te handelen bij een storing?***

Om onnodige kosten te voorkomen, raden wij u aan bij storingen eerst nauwkeurig de gebruiksaanwijzing te lezen. Indien de gebruiksaanwijzing daarin geen uitkomst biedt, kunt u uw handelaar raadplegen en/of hem het apparaat ter reparatie aanbieden.

- ***...en bij problemen?***

Bij problemen omtrent de garantie-uitvoering kunt u zich in verbinding stellen met ***Philips Nederland B.V., Afdeling Consumentenbelangen, Antwoordnummer 500, 5600 VB EINDHOVEN*** (postzegel niet nodig), of ***☎ 040-78 11 78.***

GARANTIE FÜR DIE SCHWEIZ

Philips-Geräte sind aus einwandfreiem Material und mit großer Sorgfalt hergestellt worden. Dieses Gerät wird Ihnen gute Dienste leisten, sofern es sachgemäß bedient und unterhalten wird.

Trotz aller Sorgfalt ist das Auftreten von Fehlern nicht ganz auszuschließen. Im Falle eines Defektes wenden Sie sich bitte unter Vorlage des Einkaufsbeleges und des Gerätepasses an das Fachgeschäft, in welchem Sie das Gerät erworben haben.

GARANTIE POUR LA SUISSE

Les appareils Philips ont été fabriqués au moyen de matériaux de toute première qualité et avec beaucoup de soins. Cet appareil vous donnera encore plus de satisfaction si l'utilisation et l'entretien sont suivis selon le mode d'emploi.

Malgré tous les soins apportés, l'apparition de défauts n'est pas exclue. Dans ce cas, nous vous serions reconnaissants de bien vouloir vous adresser directement chez votre vendeur muni du passeport de l'appareil ainsi que de la facture s'y reportant.

GARANZIA PER LA SVIZZERA

Gli apparecchi Philips sono prodotti con materiali di prima qualità e assemblati con la massima cura. Essi Vi offriranno un ottimo servizio, in cambio di un accurato uso e manutenzione.

Malgrado tutti i nostri sforzi, non è escluso che possano avvenire dei guasti In caso di difetto Vi preghiamo di rivolgerVi al Vostro fornitore specializzato, portando con Voi il passaporto assieme ai documenti d'acquisto.

09-'89

GARANTIE IN ÖSTERREICH
In Österreich ist die Gewährleistung für Verträge zwischen Händler und Käufer gesetzlich geregelt. Zur Geltendmachung eines Gewährleistungsanspruches dient der Kaufbeleg.
Die Österreichische Philips Industrie GmbH unterstützt die Gewährleistungsverpflichtung Ihres Händlers für Neugeräte, die der Handel über die Österreichische Philips Industrie GmbH bzw. Horny Vertriebsgmbh bezogen hat, dadurch, daß für den Käufer innerhalb von 6 Monaten ab Verkaufsdatum Funktionsmängel (Fabrikations- oder Materialfehler) in einer unserer Service-Filialen kostenlos, d.h. ohne Verrechnung von Arbeitszeit und Material, behoben werden.
Schäden, die durch äußere Einflüsse, unsachgemäße Behandlung oder unsachgemäßen Fremdeingriff entstanden sind, sowie Gehäusefehler oder Glasbruch, sind von dieser Zusage ausgeschlossen.
Philips Zentrale Kundeninformation:
– 1101 WIEN, Triesterstraße 64, ☎ 0222-60101-DW 1620 oder DW 1563
– 6020 INNSBRUCK, Klostergasse 4, ☎ 05222-74694
– 9020 KLAGENFURT, Villacher Straße 161, ☎ 0463-22397-DW 94
Philips Service-Organisation:
– 1232 WIEN, Ketzergasse 120, ☎ 0222-8662-0

GARANZIA E ASSISTENZA VALIDE PER L'ITALIA
Questo apparecchio è stato realizzato con materiali di prima qualità e costruito con la massima cura. La Philips comunque fornisce all'acquirente una Garanzia di buon funzionamento secondo le condizioni stabilite dall'***ANIE***.
Tale Garanzia decorre dalla data di acquisto ed ha la durata di ***6 mesi.*** Per aver diritto alla Garanzia è necessario che questo certificato riporti i dati di Modello e Matricola dell'apparecchio, la data di acquisto ed il timbro del rivenditore; inoltre per tutti gli apparecchi per i quali è prevista la 'ricevuta fiscale' (o altro documento di consegna) il documento stesso dovrà essere conservato con questo certificato a certificazione della data d'acquisto.
In caso di necessità il prodotto dovrà essere fatto pervenire al Centro di Assistenza più vicino il cui recapito è pubblicato sugli elenchi telefonici della zona di residenza alla voce Philips.
Per questo apparecchio Philips offre un Abbonamento all'Assistenza Tecnica. Per informazioni rivolgersi ai Centri di Assistenza o al servizio Consumatori Philips.
Philips S.p.A., Viale le Fulvio Testi 327, 20162 MILANO, ☎ 1678-20026

PHILIPS IBÉRICA, S.A.E.
Garantiza este aparato durante 6 meses, a partir de la fecha de adquisición, de la forma siguiente:
1. Cubriendo cualquier defecto de fabricación o vicio de origen, así como la totalidad de sus componentes, incluyendo la mano de obra necesari para el reemplazo de las piezas defectuosas, por nuestros talleres autorizados.
2. Esta garantía no cubrirá la avería, si es consecuencia de incorrecta instalación del aparato, manifiesto mal trato o uso inadecuado del mismo. La calificación de las averías corresponderá únicamente a los servicios técnicos de los talleres autorizados Philips.
3. Las reparaciones que pudieran producirse durante el periodo de vigencia de la presente garantía se efectuarán, bien en el domicilio del usuario, bien en los talleres autorizados Philips, a libre elección y criterio de ésta última.
4. Transcurrido un mes desde la fecha de adquisición del aparato, todos los gastos de desplazamiento del personal técnico para proceder al examen y/o reparación del aparato correrán por cuenta del usuario de acuerdo con las tarifas establecidas para este concepto.
5. En todas las reparaciones se deberá acompañar al aparato factura de compra y la presente garantía debidamente cumplimentada, con la indicación exacta de la fecha de venta del aparato.
6. En todo caso, el titular de la garantía tiene los derechos mínimos reconocidos por la Ley.

Titular (Comprador) .....

Domicilio .....

GARANTÍA PARA MÉXICO
Este aparato está fabricado con materiales de alta calidad y ha sido cuidadosamente verificado. Philips, por lo tanto, da a usted una garantía de 12 meses a partir de su fecha de compra.
La garantía ampara la reposición de las piezas defectuosas debidas a fallas en su montaje o en los materiales, incluyendo la mano de obra necesaria para su reemplazo en nuestras Sucursales o talleres autorizados.
En caso de fallas en su aparato le rogamos se sirva poner en contacto con su distribuidor.
Esta garantía no cubrirá las averías que resulten como consecuencia de una instalación incorrecta del aparato, manifiesto maltrato o uso inadecuado del mismo.
Philips se obliga a reparar y devolver a usted su aparato en un plazo no mayor de 30 días hábiles contados a partir de la fecha de haber ingresado su aparato a uno de nuestros talleres.
Para que esta garantía sea válida, es necesario que el certificado que figura en la parte posterior de esté instructivo haya sido debidamente llenado en el momento de la compra del aparato.
En caso de extravío del certificado con la presentación de la factura o remisión de su aparato podrá hacer efectiva la garantía correspondiente.
Si usted tiene alguna duda o pregunta que no le pueda solucionar su distribuidor, por favor ponerse en contacto con:
Oficinas Centrales de Servicio, Av. Coyoacán No. 1051, Col. del Valle 03100 MÉXICO, D.F. - ☎ 5-75-20-22 o 5-75-01-00 NOM

GARANTI OG SERVICE FOR DANMARK
De er nu ejer af et apparat, hvis konstruktion er baseret på erfaring og lang tids forskning. Philips garanterer for kvaliteten, og hvert led i fabrikationen er underkastet stadig kontrol. Alle henvendelser om fejl under garantien skal rettes til den forhandler, der har udleveret og underskrevet garantibeviset, hvorpå de gældende garantibestemmelser tillige er anført. Garantien er kun gældende i købslandet.

GARANTI I NORGE
De er nå eier av et apparat som er basert på lang tids forskning og erfaring.
Philips garanterer for kvaliteten, men hvis en feil skulle oppstå bes De ta kontakt med den forhandler som har utlevert og underskrevet garantibeviset. Garantien gjelder kun i kjøpslandet hvor de gjeldende garantibestemmelser må følges.
Hvis De trenger ytterligere opplysninger utover de forhandleren kan gi Dem, kan De henvende Dem til: ***Norsk A/S Philips, Avd. Audio/Video, Sandstuveien 70, OSLO 6 - ☎ 02 - 68 02 00***

CONDIÇÕES VÁLIDAS PARA PORTUGAL
A Philips Portuguesa, SA, assegura ao comprador deste aparelho garantia contra qualquer defeito de material ou fabrico, pelo prazo de 6 meses, contado a partir da data de aquisição. As agulhas de fonocaptores não têm qualquer garantia.
A Philips Portuguesa, SA, anula a garantia ao aparelho desde que se verifique ser a deficiência motivada por acidente, utilização incorrecta, causas externas, ou nos casos em que apresente vestígios de ter sido violado, ajustado ou reparado por entidade não autorizada. Também será considerada nula a garantia se este certificado apresentar rasuras ou alterações.
A Philips Portuguesa, SA, obriga-se a prestar a garantia referida somente nos seus Serviços Técnicos ou nos Concessionários de Serviço autorizados. As despesas e riscos de transporte de e para as oficinas serão sempre da responsabilidade do comprador.
Nota: Para que o aparelho seja assistido ao abrigo da garantia, é indispensável que seja apresentado este certificado, devidamente preenchido e autenticado, por vendedor autorizado, aquando da sua aquisição.
Se sobre esta garantia necessitar algum esclarecimento que o vendedor não lhe possa dar, deve dirigir-se a: ***Philips Portuguesa, SA,***
– Outurela - Carnaxide - 2795 LINDA A VELHA - ☎ 418 00 71/9
– R. Eng. Ezequiel de Campos, 182 - 4100 PORTO - ☎ 67 26 13

GARANTI I SVERIGE
Garanti lämnas på denna Philipsapparat i enlighet med den garantiförbindelse som tillhandahålles av återförsäljaren. I garantiförbindelsen ges anvisningar om reklamation. Garantin gäller endast i inköpslandet.

TAKUU JA HUOLTO
Tämän tuotteen rakenne on pitkäaikaisen, kokemuksella tehdyn tutkimustyön tulos. Jatkuvan eri tuotantovaiheissa tehtävän laatutarkkailun vuoksi Philips takaa tuotteensa laadun.
Tarkemmat tiedot takuuehdoista saat Philips-myyjältä tai alla olevasta osoitteesta.
Oy Philips AB, Sinikalliontie 3, 02630 ESPOO - ☎ (358-0)-50261
✉ Oy Philips AB, P.O. Box 75, 02631 ESPOO

ΠΛΗΡΟΦΟΡΙΕΣ ΓΙΑ SERVICE ΚΑΙ ΕΓΓΥΗΣΗ ΣΤΗΝ ΕΛΛΑΔΑ
Η συσκευή έχει ελεγχθεί σχολαστικά, η λειτουργία της είναι άριστη και λόγος αντικαταστάσεως της δεν πρόκειται σε καμμιά περίπτωση να προκύψει. Αν όμως, παρ' όλα αυτά, κάποιο εξάρτημα δεν λειτουργήσει, το εξάρτημα αυτό και η εργασία επισκευής παρέχονται από την εταιρία δωρεάν. Η προσκομιζόμενη για επισκευή συσκευή πρέπει να συνοδεύεται απαραίτητα από το ΔΕΛΤΙΟ ΛΙΑΝΙΚΗΣ ΠΩΛΗΣΕΩΣ, ή φωτοτυπία του, και το παρόν έντυπο συμπληρωμένο και σφραγισμένο από το κατάστημα αγοράς του.
Η εγγύηση ισχύει για ΕΝΑ έτος, από την ημερομηνία αγοράς. Η εγγύηση δεν ισχύει στις παρακάτω περιπτώσεις:
α) Για ανωμαλία όχι από βλάβη της συσκευής, αλλά από φθορά ή βλάβη, που προκλήθηκε από τρίτους ή από μεταβολή της τάσεως του ηλεκτρικού ρεύματος.
β) Για ανωμαλία λόγω ελαττωματικής εγκαταστάσεως της συσκευής.
γ) Όταν ο αριθμός κατασκευής της συσκευής έχει αλλοιωθεί.
δ) Για κεφαλές πίκ-άπ και μικρόφωνα.
Η εργασία επισκευής γίνεται στα Εργαστήρια της Εταιρίας, όπου ο πελάτης πρέπει να μεταφέρει τη συσκευή με δική του δαπάνη.
Κανένας αντιπρόσωπος δεν έχει το δικαίωμα αλλαγής των όρων εγγυήσεως.
Μετά τη λήξη του χρόνου εγγυήσεως, για κάθε πρόβλημα συντηρήσεως, επισκευής ή συμβουλής, σας συνιστούμε να αποτείνεσθε στα κατά τόπους Service της Εταιρίας.
Διεύθυνση Κεντρικών SERVICE PHILIPS:
25ης Μαρτίου 15, 177 78 Ταύρος - ☎ 4894.911
Τσιμισκή 62, 546 93 Θεσσαλονίκη - ☎ 260.621

TYPE NO. OF PRODUCT: **TIPO NO. DEL PRODUCTO:**

Date of purchase - Date d'achat - Kaufdatum - Koopdatum
Fecha de compra - Data da compra - Data di acquisto - Købsdato
Kjøpedato - Inköpsdatum - Ostopäivä - Ημερομηνία αγοράς

19

Dealer's name, address and signature
Nom, adresse et signature du revendeur
Name, Anschrift und Unterschrift des Händlers
Naam, adres en handtekening van de handelaar
Nombre, dirección y firma del distribuidor
Nome, indirizzo e firma del fornitore
Nome, morada e assinatura do vendedor
Forhandlerens navn, adresse og underskrift
Återförsäljarens namn, adress och namnteckning
Myyjän nimi, osoite ja allekirjoitus
Όνομα/Επώνυμο Αντιπροσώπου

09-'89